


Honeywell

Wiring Instructions for adapting the S8610U Honeywell Ignition Control to any boiler

Single Rod (leave Jumper)
 On the following models:
 Viessmann: ECD
 Vitogas and older ECDS
 ECV
 Atola AR
 RS
 Vitogas GS-1
 GS-10

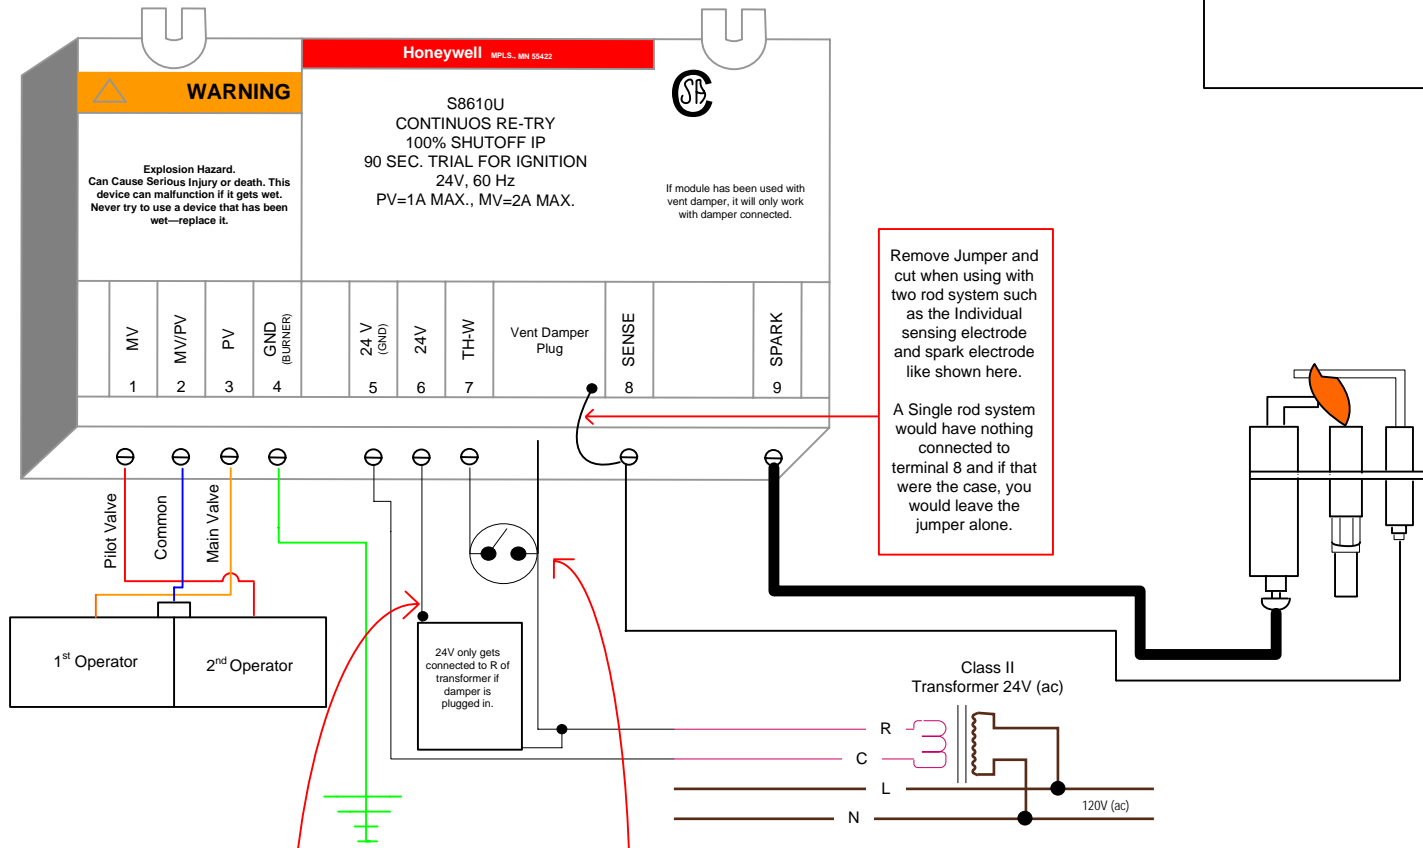

Remove Jumper and cut when using with two rod system such as the Individual sensing electrode and spark electrode like shown here.

A Single rod system would have nothing connected to terminal 8 and if that were the case, you would leave the jumper alone.

Pilot Burner/Ignitor

Thermostat connections R & W at the thermostat

This connection would only be made when operating a damper

CAPCO
 ENERGY SUPPLY, INC.

781-721-0303 FAX 781-721-9119 WWW.CAPCOSUPPLY.COM

10 INDUSTRIAL PARKWAY WOBURN MA 01801 Directions for wiring S8610U Michael Fox 09/06/2006

THIS IS ONLY A CONCEPT DRAWING. ALL CONDITIONS AND NECESSARY COMPONENTS MUST BE FIELD VERIFIED AND ARE THE RESPONSIBILITY OF THE INSTALLING CONTRACTOR